Ready Mixer

OWNERS MANUAL

Safety, Operating Procedures, and Specifications

QUESTIONS? CONTACT US.

Daniel Brandon Sales Represntative

800-770-3956 sales@readymixer.com www.readymixer.com





TABLE OF CONTENTS



Mixers on Trailers

Skid Rail Mixers

Hopper

Wheel Loader

Skid Steer

MIXERS ON TRAILERS



Safety Precautions

Please be aware of your surroundings when operating this heavy machinery and make sure no hands go near the spinning shaft when in operation.

Never unhook a loaded trailer from a towable vehicle

Never allow children to operate the equipment Never operate the equipment while under the influence

The Battery Power Switch can immediately kill the power of the machinery in case of an accident or to prevent an accident

- 1. Check Gas Tank
- 2. Check Hydraulic Oil
- 3. Check Brake Fluid Oil
- 4. Check Engine Oil
- 5. Turnover the Battery Power Switch
- 6. Start the Honda GX690 Engine
 - a. Pull Choke Out on Cold Start to Turnover the Engine
 - b. Push Choke Back in once the engine is started
 - c. Push the Throttle to Full
- 7. Use Rotation Lever for Mixing and Tilt Lever for pouring



MIXERS ON TRAILERS





Model	1 Yard	1.75 Yard	3 Yard
Gear Reducer	Zhier	Zhier	Zhier
Motor	Honda GX690	Honda GX690	Honda GX690
Tire Size	8 * 6.5 - 16 LT	8 * 6.5 - 16 LT	8 * 6.5 - 16 LT
Hitch Type	2 inch	2 inch	2 inch
Length	16 ft	16 ft	16 ft
Width	5 ft	5 ft 7 in	6 ft 2 in
Height	6 ft 11 in	7 ft 3 in	7 ft 7 in
Pour Opening	3 ft	3 ft	3 ft
Battery Size	12 volt 60 Ah	12 volt 60 Ah	12 volt 60 Ah
Gas Tank Size	2.6 Gallon	2.6 Gallon	2.6 Gallon
Cooling Fan Type	Electric	Electric	Electric
Dry Weight	2,800 lbs	3,300 lbs	3,800 lbs
GVW Weight	6,800 lbs	10,000 lbs	15,800 lbs
Water Tank Size	50 Gallons	50 Gallons	50 Gallons
Axle Type	Dual	Dual	Dual

SKID RAIL MIXERS



Safety Precautions

Please be aware of your surroundings when operating this heavy machinery and make sure no hands go near the spinning shaft when in operation.

Never allow children to operate the equipment Never operate the equipment while under the influence

The Battery Power Switch can immediately kill the power of the machinery in case of an accident or to prevent an accident Machine Operating Instructions

- 1. Check Gas Tank
- 2. Check Hydraulic Oil
- 3. Check Water Tank
- 4. Check Engine Oil
- 5. Turnover the Battery Power Switch
- 6. Start the Honda GX690 Engine
 - a. Pull Choke Out on Cold Start to Turnover the Engine
 - b. Push Choke Back in once the engine is started
 - c. Push the Throttle to Full

7.



SKID RAIL MIXERS





Model	3 Yard	4 Yard	5.5 Yard	6.5 Yard	9 Yard
Gear Reducer	Zhier	Zhier	Zhier	Zhier	Zhier
Motor	Honda GX690	Honda GX690	Honda GX690	Honda GX690	Honda GX690
Drum Diameter	1.47 Yards	1.69 Yards	1.69 Yards	1.91 Yards	2.24 Yards
Dry Weight	2,458 lbs	2,678 lbs	3,031 lbs	3,185 lbs	4,541 lbs
Drum Thickness	4 mm	4 mm	4 mm	4 mm	5 mm
Length	116 inches	138 inches	159 inches	171 inches	182 inches
Width	53 inches	61 inches	68 inches	68 inches	80 inches
Height	64 inches	70 inches	85 inches	87 inches	88 inches
Water Tank Size	50 Gallons				
Gas Tank Size	2.6 Gallons				
Power Type	Gasoline	Gasoline	Gasoline	Gasoline	Gasoline
Discharge Speed	≥ 2.2 yards per minute				

HOPPER



Safety Precautions

Please be aware of your surroundings when operating this heavy machinery and make sure no hands go near the belt or conveyor belt when running

Never allow children to operate the equipment Never operate the equipment while under the influence

- 1. Check Gas Tank
- 2. Check Engine Oil
- 3. Start the Honda 270 Engine
 - a. Pull Choke Out on Cold Start to Turnover the Engine
 - b. Pull the Cord like you would start a lawnmower
 - c. Push Choke Back in once the engine is started
 - d. Push the Throttle to Full
- 4. Proceed to dump aggregates into the hopper



HOPPER





Model	Hopper	Hopper with Extended Legs
Motor	Honda GX270	Honda GX270
Motor HP	8.5 HP	8.5 HP
Fuel Type	Gasoline	Gasoline
Length	16 ft	16 ft
Width	5 ft	5 ft
Height	6 ft 11 in	8 ft 11 in
Dry Weight	1,500 lbs	1,627 lbs
Belt Width	16 in	16 in
Hopper Style	Dry	Dry
Conveyor Belt Drop Height	63 in	87 in

WHEEL LOADER



Safety Precautions

Please be aware of your surroundings when operating this heavy machinery and make sure no one is near the equipment when moving Make sure to be careful when switching attachments on the equipment Never allow children to operate the equipment Never operate the equipment while under the influence

Ensure there are no power lines or gas lines near while operating equipment.

- 1. Grease your Fittings
- 2. Check Diesel Tank (on the right side of the equipment)
- 3. Check Engine Oil (Located on the backside under engine access panel)
- 4. Check Hydraulic Fluid Levels (Left side of the equipment)
- 5. Check Hydraulic Hose Connections
- 6. Put the keys in and start the machine
 - a. Make sure that your gear shift is in neutral
 - b. Put the correct attachment onto the wheel loader
 - c. Use the hooks to secure the attachment in and the quick hitch handle to lock the attachment.
- 7. Put the machine in forward
- 8. Use Hydraulic Lift Handle to pickup raw aggregate.
- 9. Proceed to dump aggregates into the hopper



WHEEL LOADER





Model	Wheel Loader
Rated Bucket Capacity	14.13 ft
Hopper Width	53.15 ft
Rated Load	1764 lbs
Total Weight	5584 lbs
Engine Type	Kubota
Power of Engine	24.65 HP
Dumping Height	90.55 in
Dumping Reach	27.17 in
Minimum Ground Clearnace	8.66 in
Minimum Turning	189 in
Unloading Angle	37 degrees
Tire	31 - 15.5 - 15
Distance Between Axles	75 in
Distance Between Wheels	45.28 in
Transmission Assembly	240

SKID STEER



Safety Precautions

Please be aware of your surroundings when operating this heavy machinery and make sure no one is near the equipment when moving Make sure to be careful when switching attachments on the equipment

Never allow children to operate the equipment Never operate the equipment while under the influence

Ensure there are no power lines or gas lines near while operating equipment.

- 1. Grease your Fittings
- 2. Check Diesel Tank Gauge
- 3. Check Engine Oil
- 4. Check Hydraulic Fluid Levels
- 5. Put on desired attachment.
- 6. Check Hydraulic Hose Connections
- 7. Put both keys in and start the machine
 - a. Make sure that your gear shift is in neutral
- 8. Put the machine in forward
- 9. Use Hydraulic Lift Handle to pickup raw aggregate.
- 10. Proceed to dump aggregates into the hopper



SKID STEER





Model	Skid Steer	
Length	9.51 feet	
Width	3.5 feet	
Height	5 feet	
Weight	3,417 lbs	
Track Width	7 inches	
Transmission Drive	-	
Drive Speed Max	4.3 mph	
Engine Make and Type	Kubota 1505	
Engine Output	24 HP	
Torque Max	1700 RPM	
Bucket Capacity	7 cubic feet	